



# KiloVault® Dual HAB Cart

Mounting Cart for two KiloVault® HAB™  
7.5 kWh Lithium Energy Storage Systems

## Dual HAB Cart

KiloVault's Dual HAB Cart supports two KiloVault® HAB™ 7.5 kWh Lithium Energy Storage Systems on one portable, sturdy base. The Dual HAB Cart can be used as a large-scale emergency power backup or a fully off-grid wind/solar home power system for larger homes. KiloVault's Dual HAB Cart is equipped with heavy-duty caster wheels for easy transportation.



### Construction

Durable heavy gauge steel construction in a white powder coated finish for safe use and longevity.




### Dual HAB Installation

Dual HAB installation, 15kwh total energy. Can handle two batteries with ease.



### Stable and Sturdy

This cleverly crafted foundation is made with a thick and sturdy 1" steel frame for ultimate strength and longevity. Steel divider inside provides stability.

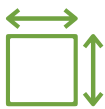

### Swivel casters for 360 degree turn

Heavy Duty Swivel Plate Locking Casters. Silent, easy to push, strong load capacity. Swivel casters rotate 360 degrees which makes turning the mating equipment possible.



### Quick Assembly

Minimum assembly is needed. All parts, tools and instructions are packed into one compact box that ships straight to your door.



### Expandability

Parallel up to 7 Dual HAB Carts to provide 3.3 Megawatt hours of storage per month.

# KiloVault® Dual HAB Cart

## Mounting Cart for two KiloVault® HAB™


### SPECIFICATIONS

Construction	Heavy gauge steel
Finish	White powder coated finish
Weight	54.80 lb
Maximum Weight Capacity	500 lb
Dimensions	33"H x 22"D x 22.5"W
For Use With	HAB™ 7.5 kWh Lithium Energy Storage System



### Dual HAB Cart Installation Instructions:

1. Insert the wall hanger into the KiloVault® HAB™ Cart base.
2. Secure the wall hanger to the cart base using the supplied bolts and flat washers.
3. Secure the left and right crossbar plates to the wall hanger using the supplied bolt assemblies.
4. Set the first KiloVault® HAB™ onto the mounting crossbars of the Dual HAB™ Cart base.
5. Set the second KiloVault® HAB™ onto the mounting crossbars of the Dual HAB™ Cart base.
6. Secure the left and right crossbar plates to both HABs using the supplied bolt assembly.
7. Once crossbars are secured, you may unlock the base caster wheels and move your Dual HAB™ Cart freely.

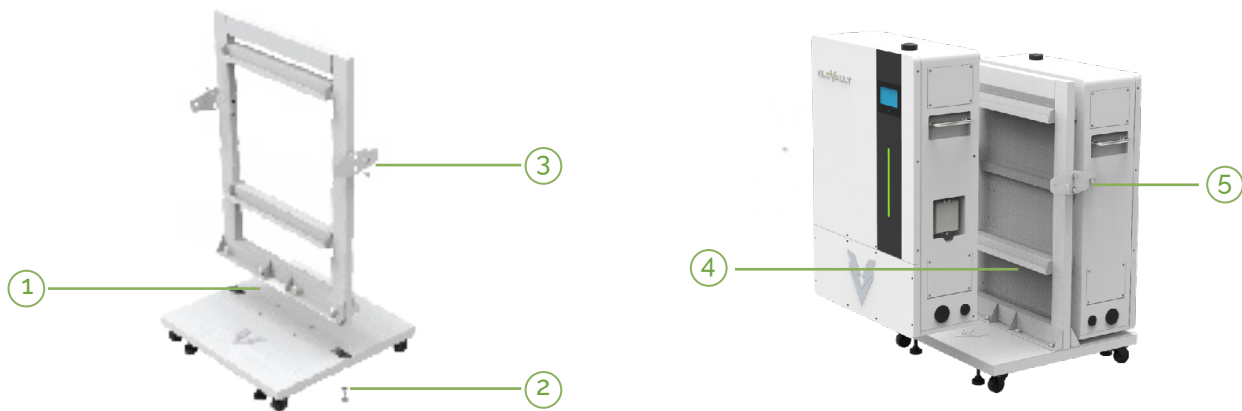

**KILOVAULT®**

330 Codman Hill Rd, Boxboro, MA 01719, USA • [info@kilovault.com](mailto:info@kilovault.com) • [www.kilovault.com](http://www.kilovault.com)